


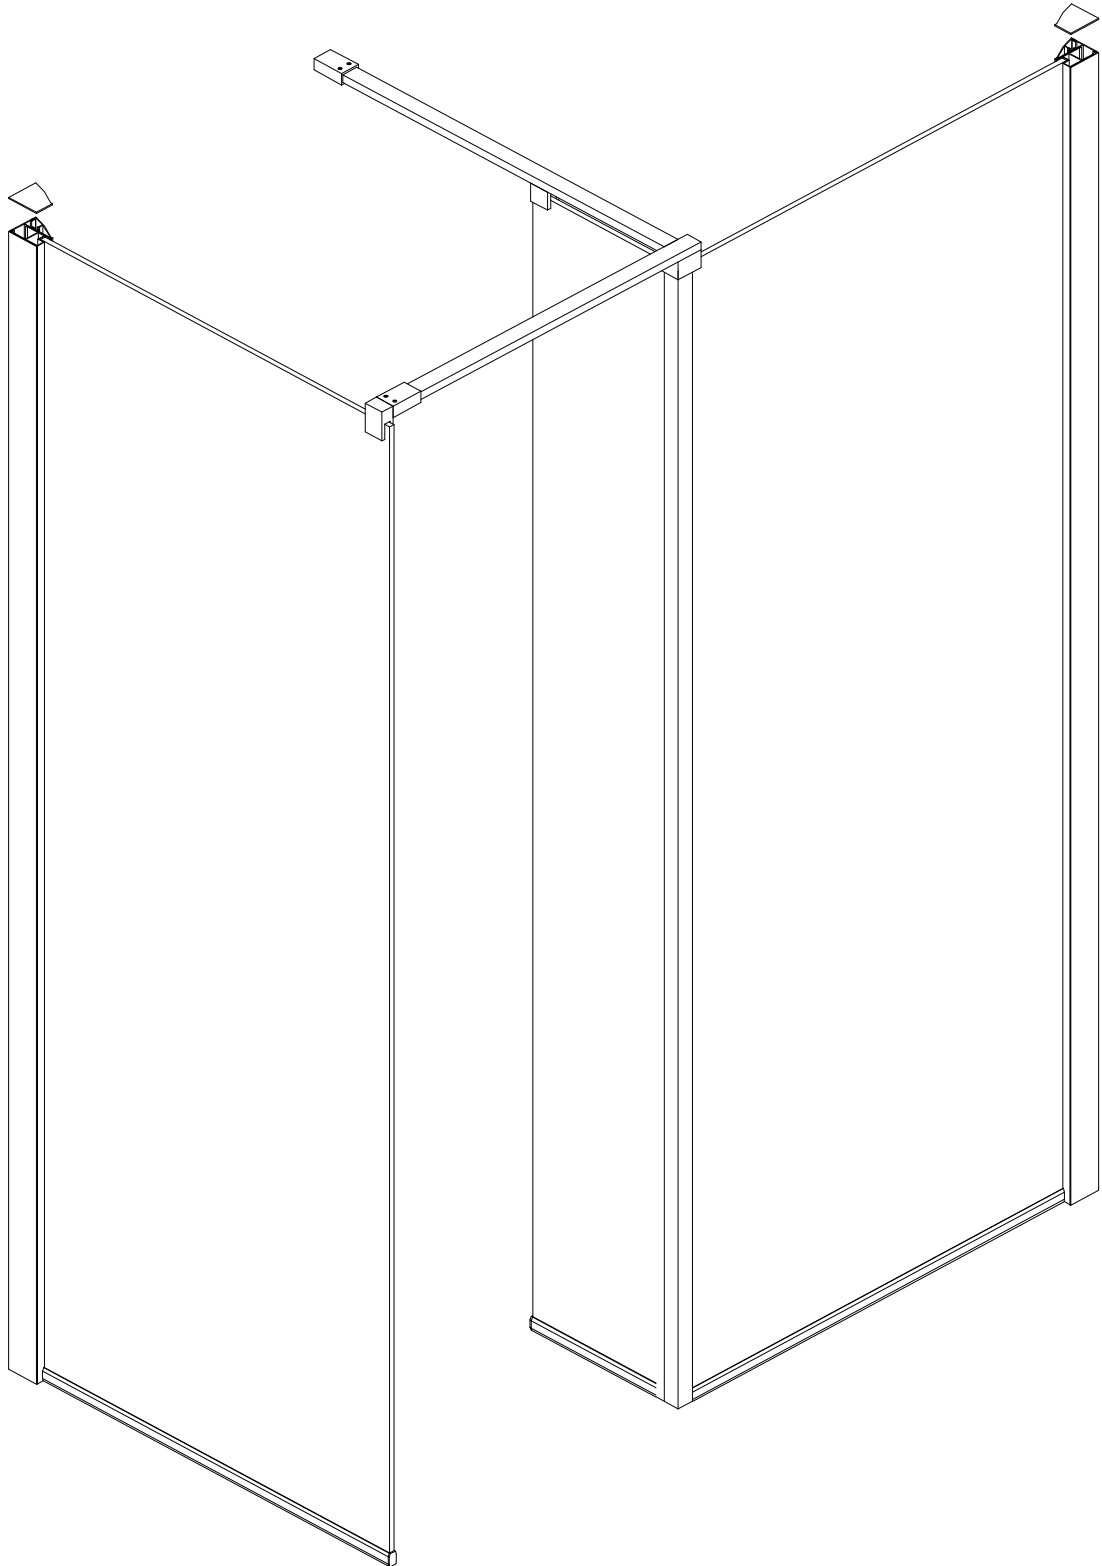










INSTALLATION INSTRUCTIONS FOR WALK IN ENCLOSURE.




You will need




Ø3mm Ø6mm

A		X11	Plastic wall plug
B		X11	Screw ST3.5*25
C		X4	Screw ST4*12

1	Long fixed panel
2	short fixed panel
3	support bracket
4	End panel
5	Profile Cover Cap
6	Aluminium Cover Strip
7	Wall Profile

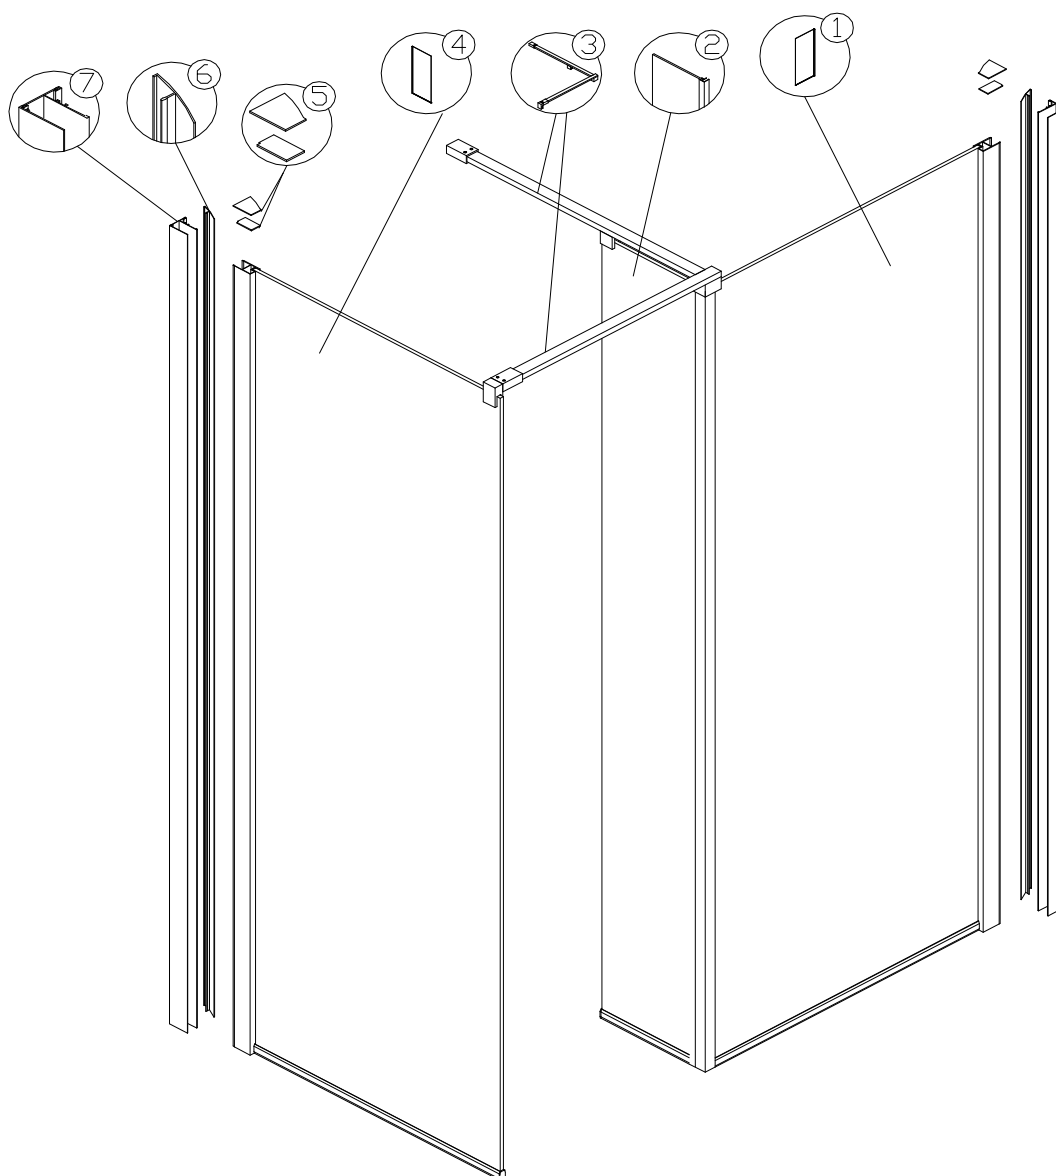

A		X11
---	---	-----

