



INSTALLATION INSTRUCTIONS FOR HINGED DOOR

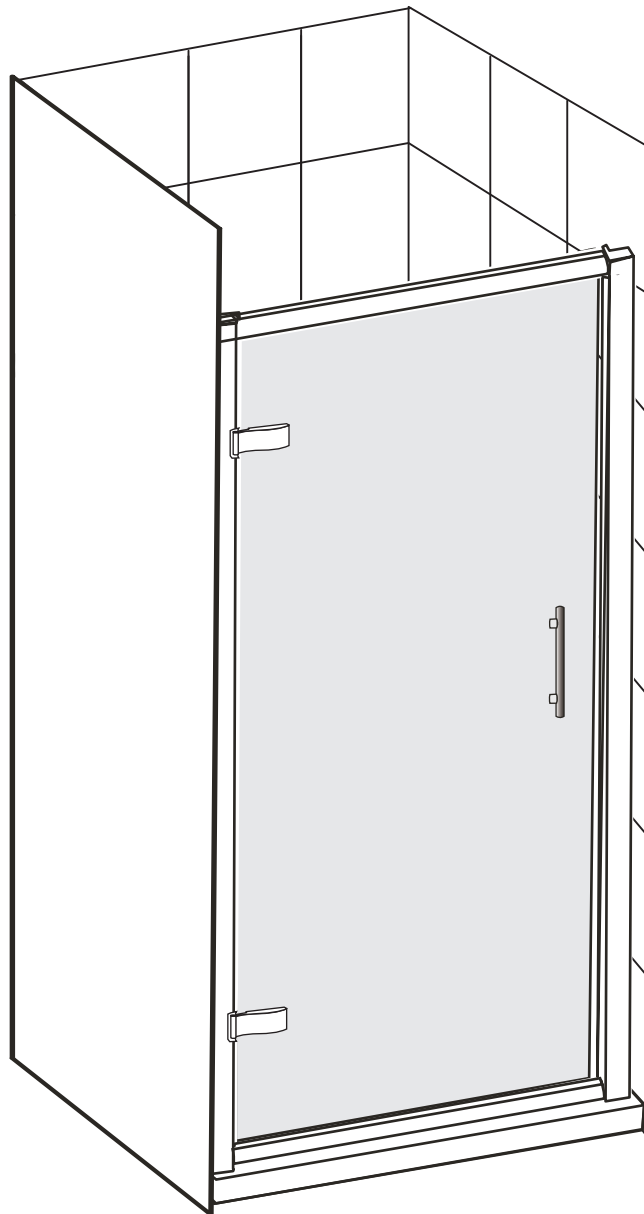

■ You will need

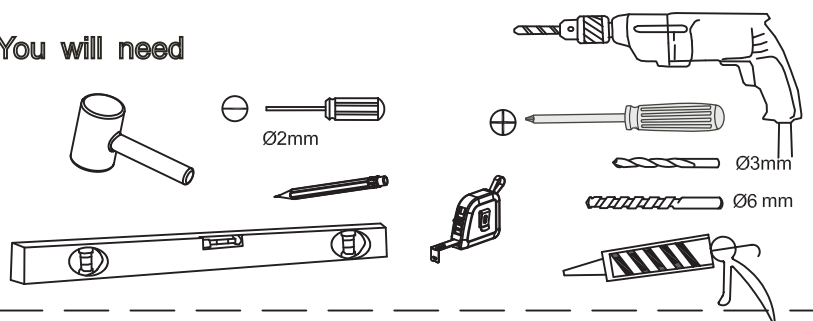

A1:CHROME SCREW COVER CAP

A2:SCREW WASHER

A3:PROFILE SCREW

C:FRAME ASSEMBLY SCREW


C1:WALL PLUG

J:DOOR HANDLE

K1:TOP PROFILE COVER

K2:TOP PROFILE COVER

A1		x14
A2		x14
A3	 ST4X10	x6
C	 ST4X30	x16
C1		x8

J		x1
K1		x1
K2		x1

1:WALL PROFILE

2:HINGED DOOR PROFILE

3:TOP AND BOTTOM
PROFILE FRAME


4:HINGES


5:GLASS DOOR


6:MAGNETIC PROFILE SEAL





7:MAGNETIC PROFILE SEAL



8:BOTTOM DOOR SEAL

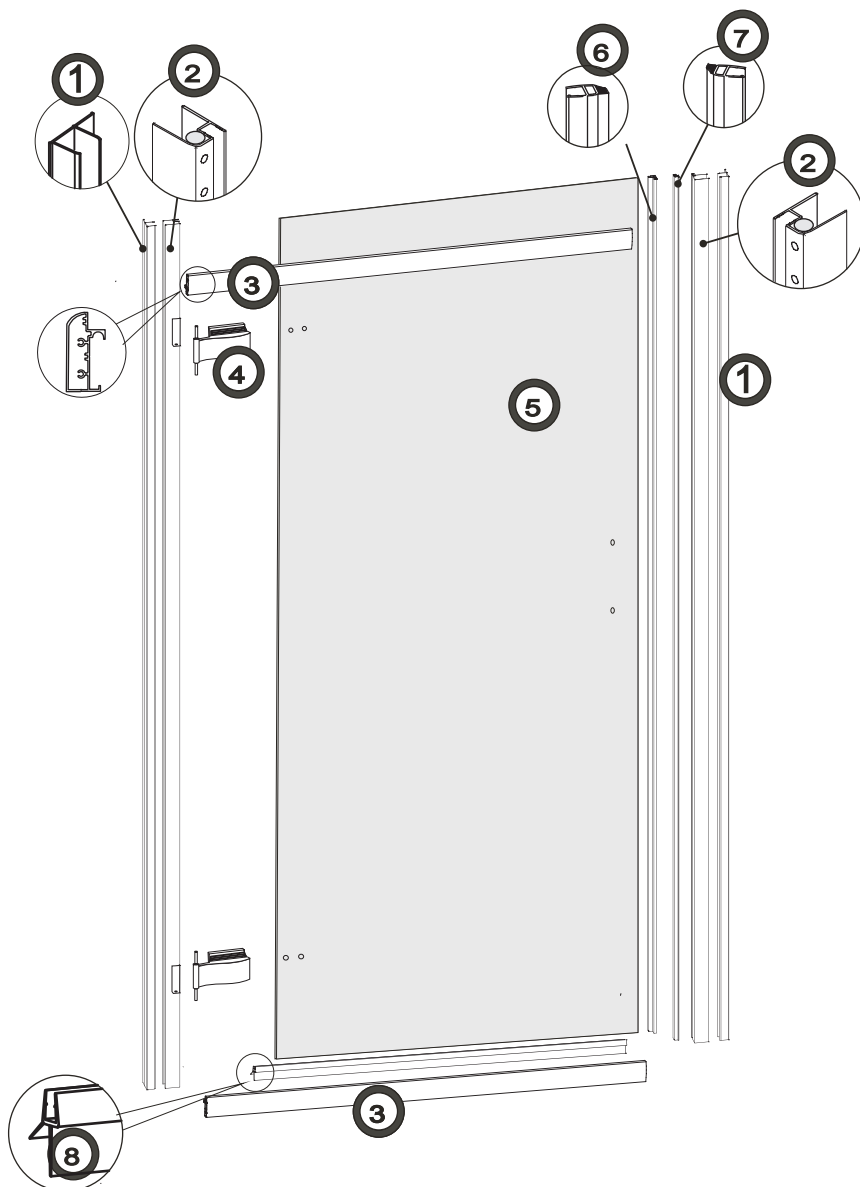

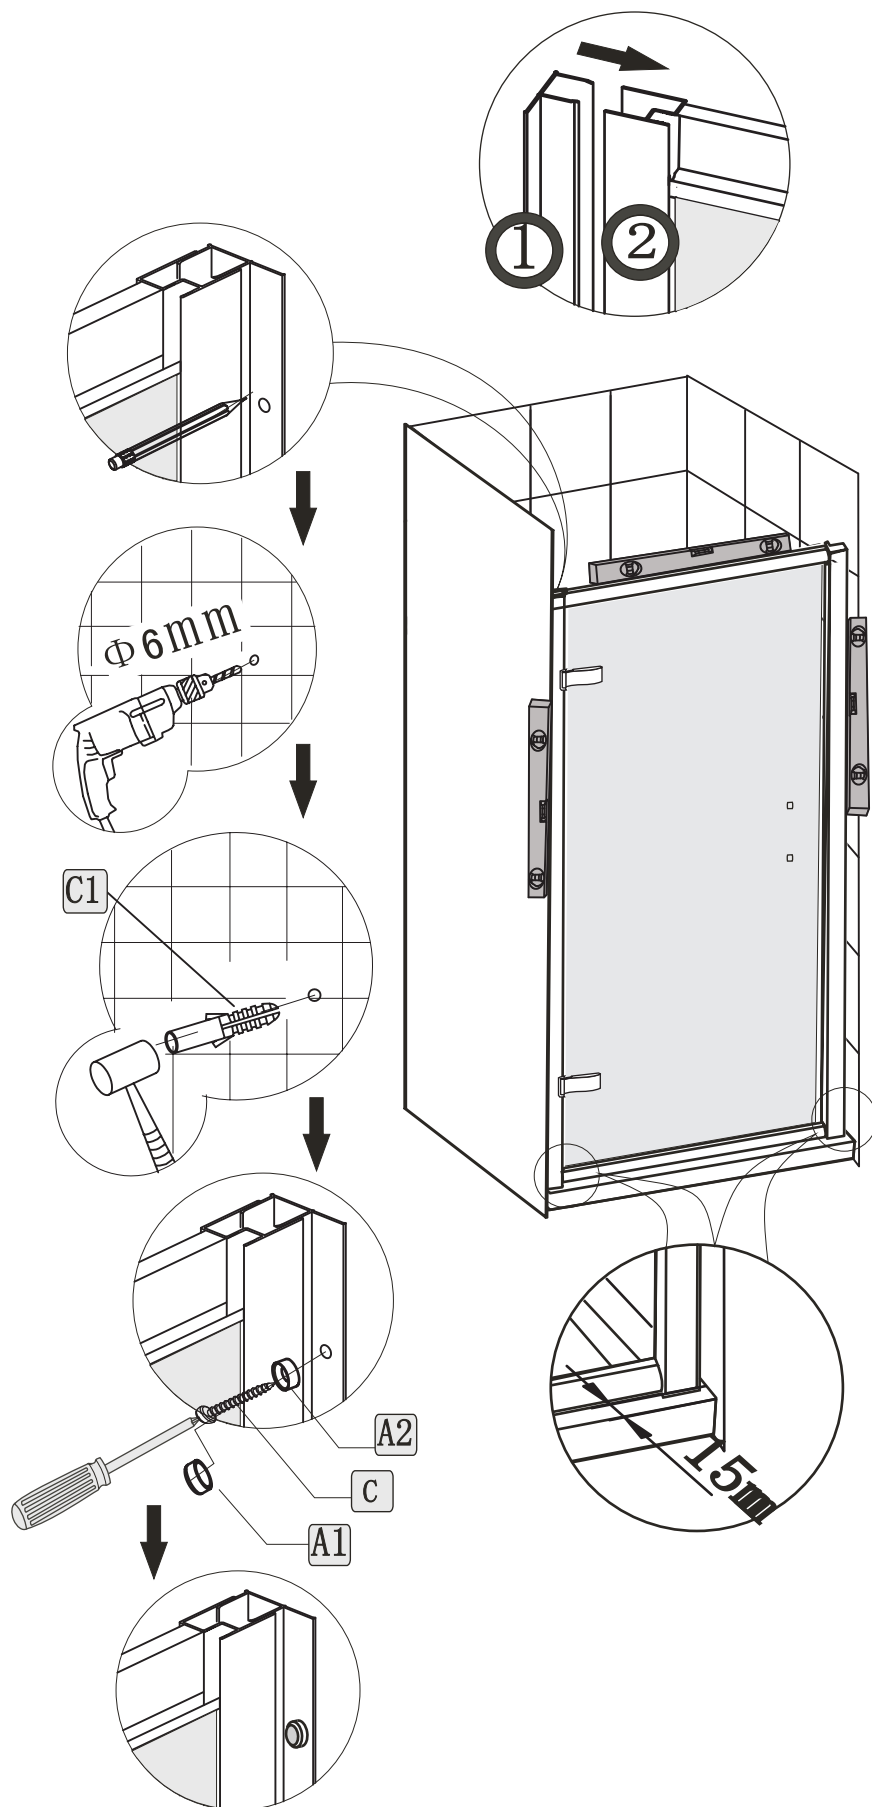

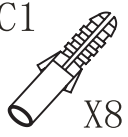A1		X8
A2		X8
C		X8
C1		X8

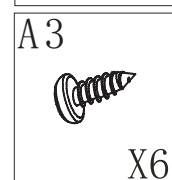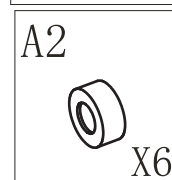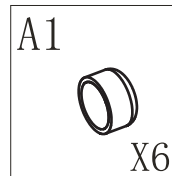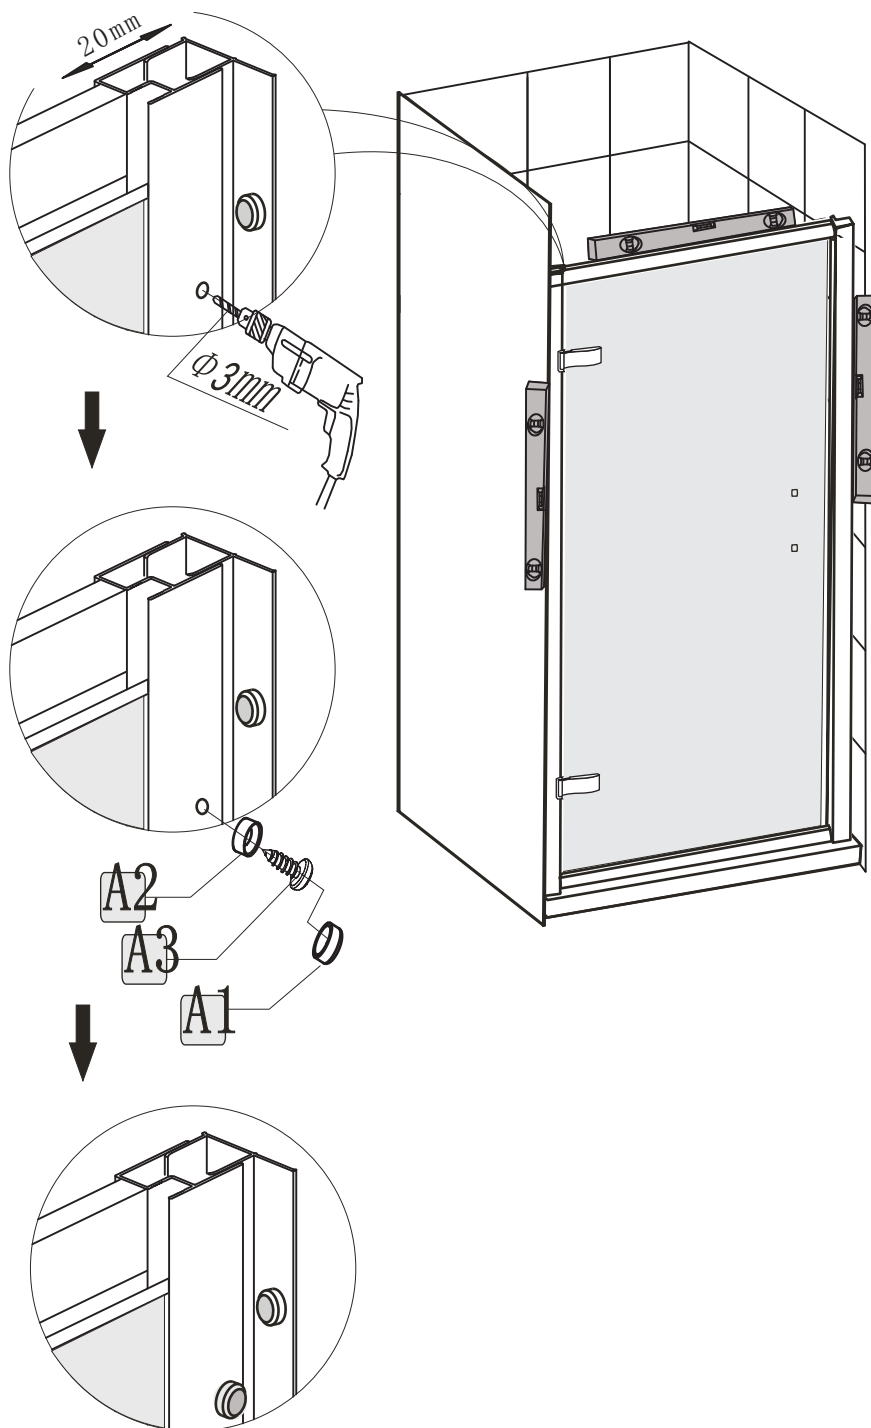

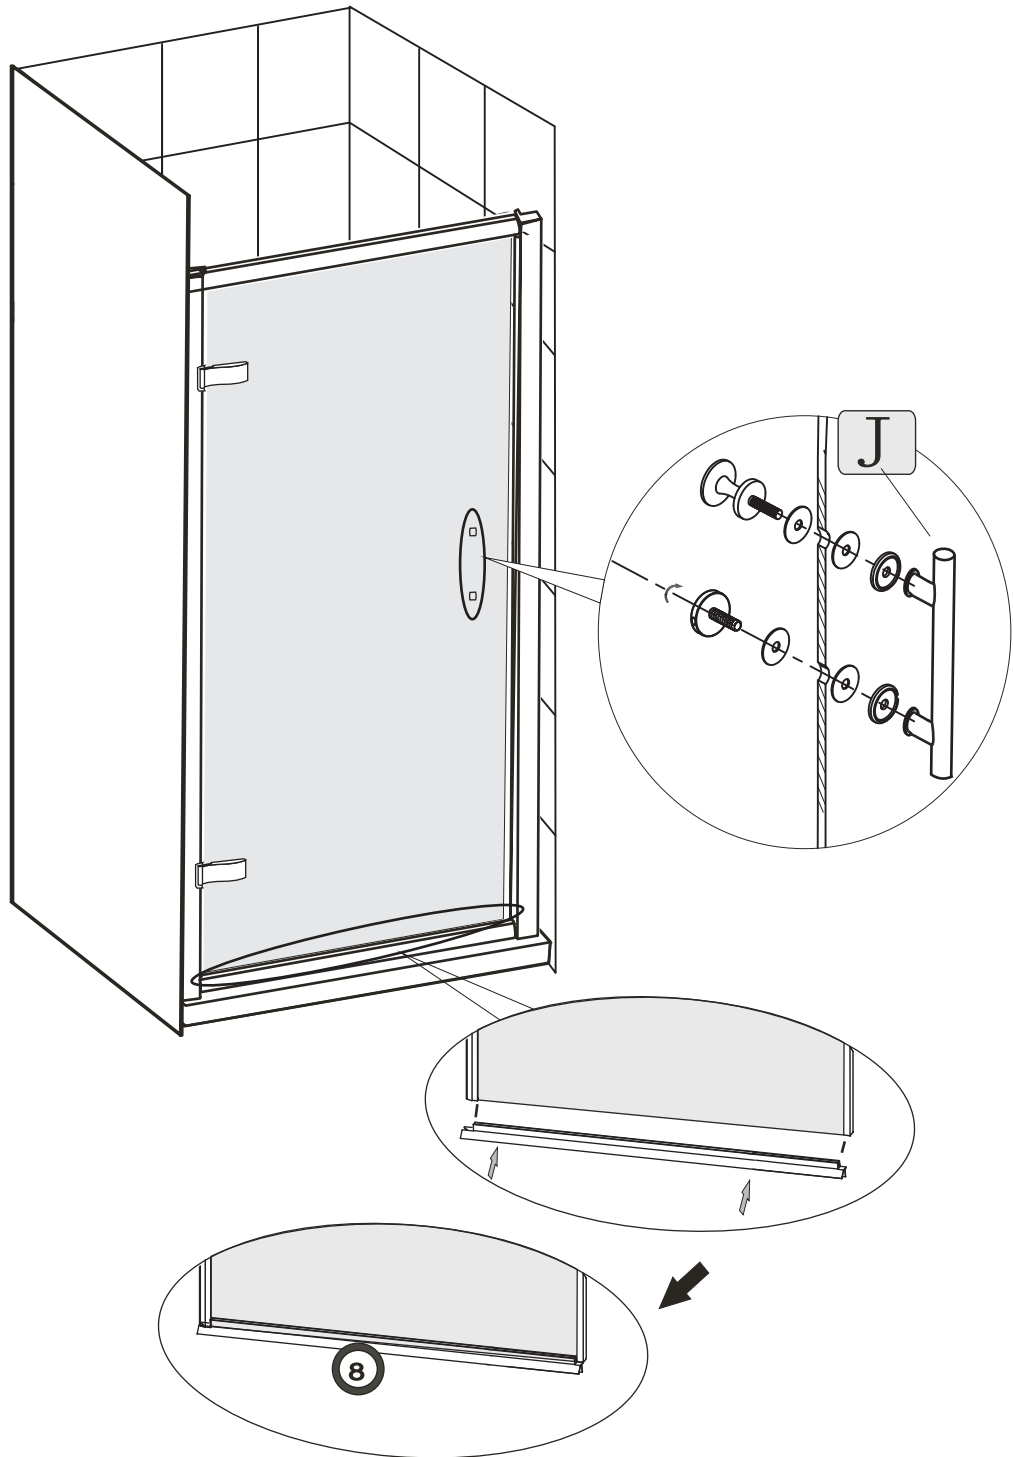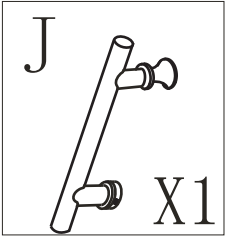

K1	K2
	
X1	X1

